



Memorex 2Xtreme MP3830-01 CD Cover Latch Replacement

Replacing the device's CD cover latch to ensure the cover is able to close and keep your CD in place.

Written By: Meghan



INTRODUCTION


The latch is a simple part to replace and must be working in order to use the CD player.

Step 1 — CD Cover Latch




- Open the CD cover so that the latch can be accessed.

Step 2

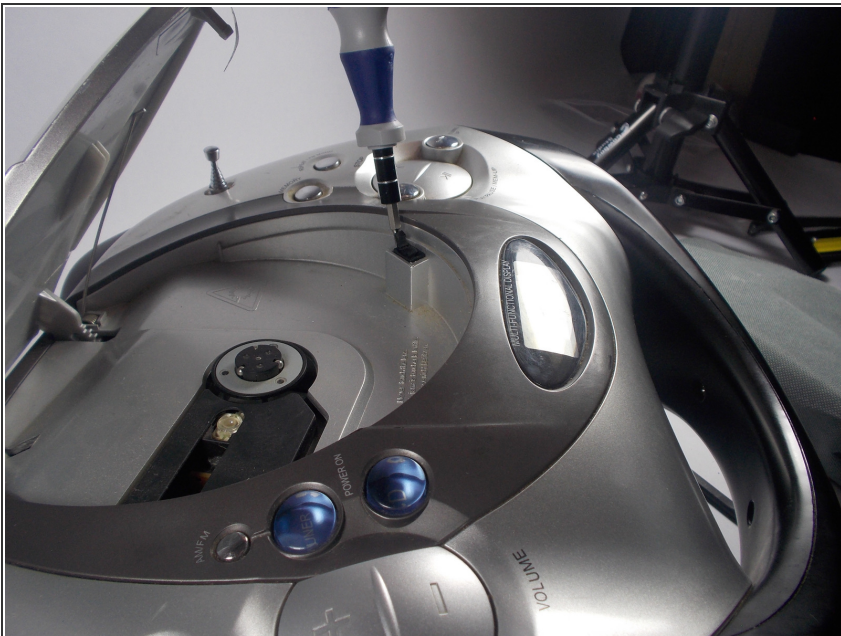

- Using a 3/16" flat head screwdriver, gently pry in the corner of the latch and the boombox housing.
- You should see the latch pop out of the housing a little bit.
- Then move to the opposite side of the latch and gently pry there.
- Keep moving back and forth until the latch comes loose and can be removed with your fingers.

Step 3

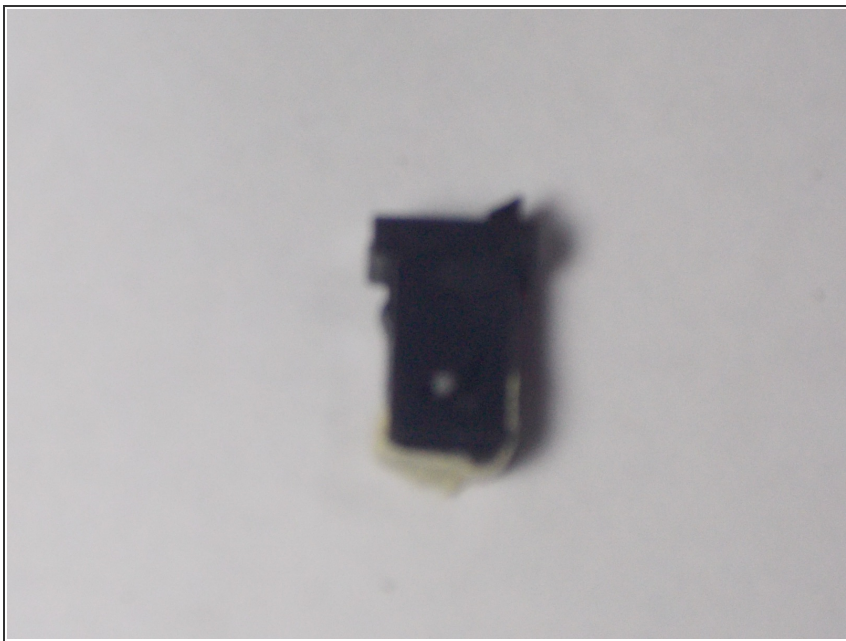

- When the latch is removed, it should look like the part in the picture.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-09 03:52:09 AM.